

INSTALLATION INSTRUCTIONS FOR SWIVEL BASE FOR DOUBLE SEAT – FORD TRANSIT CUSTOM (2013+)


Step 1: Removing the seat

Unscrew the three bolts and one larger nut that secure the seat to the floor. Set them aside — you'll need them later.

Slide the seat backward, but leave the seat belts connected.


Step 2: Preparing the floor

Use a sharp knife to cut the floor carpet along the red line (shown in the photo) — it runs close to the wiring. Cut out and remove that section of the carpet.

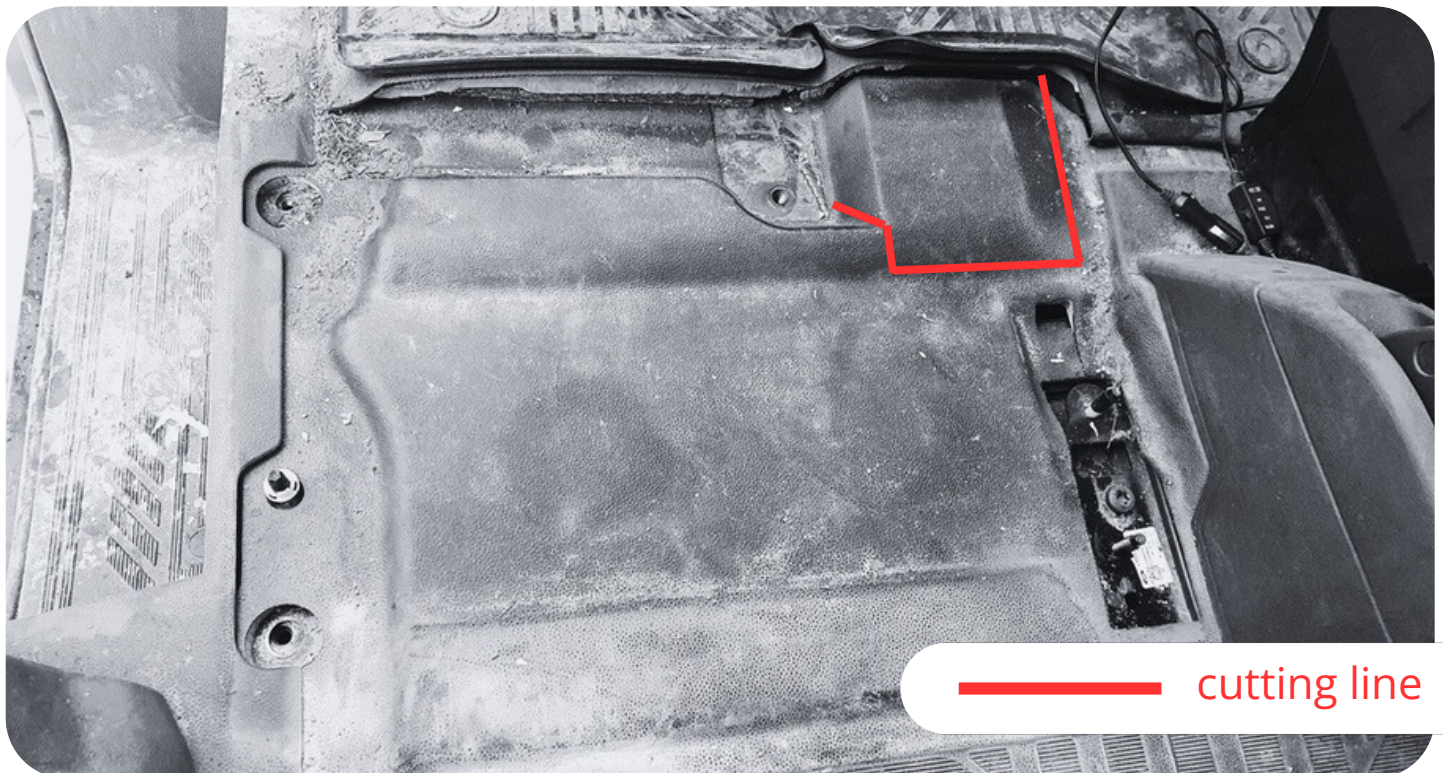

Step 3: Removing metal parts from the seat

Cut out the metal parts located under the seat, as shown in the photo.

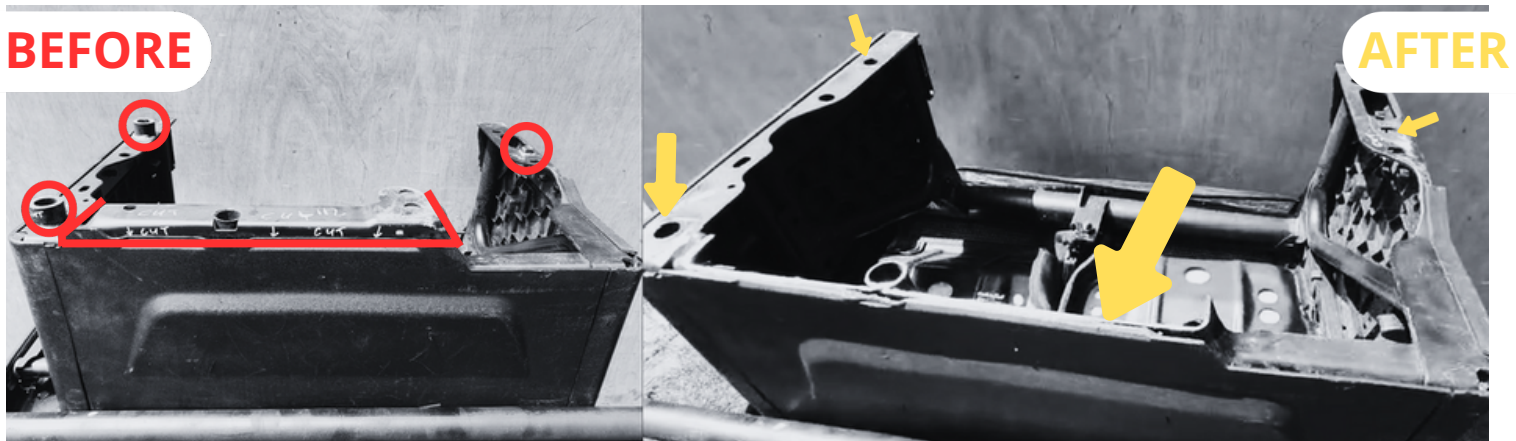

Step 4: Positioning the swivel base

Place the swivel base on the floor so that it lies flat and even. Make sure the rubber cabin mat fits well and isn't folded underneath.

Then slide the top plate of the swivel to reveal the mounting holes.

Step 5: Attaching the swivel base

Make sure everything sits flat and without tension — otherwise, the swivel mechanism and locks may not work properly. Secure it to the floor.

Step 6: Mounting the seat

Place the seat onto the swivel base and screw it in.

Step 7: Final check

Check that the swivel rotates smoothly and the locks engage properly.

All done!